


MAdoorS Fence Drop Arm Barrier Installation Catalogue I



Bouygues Construction Company

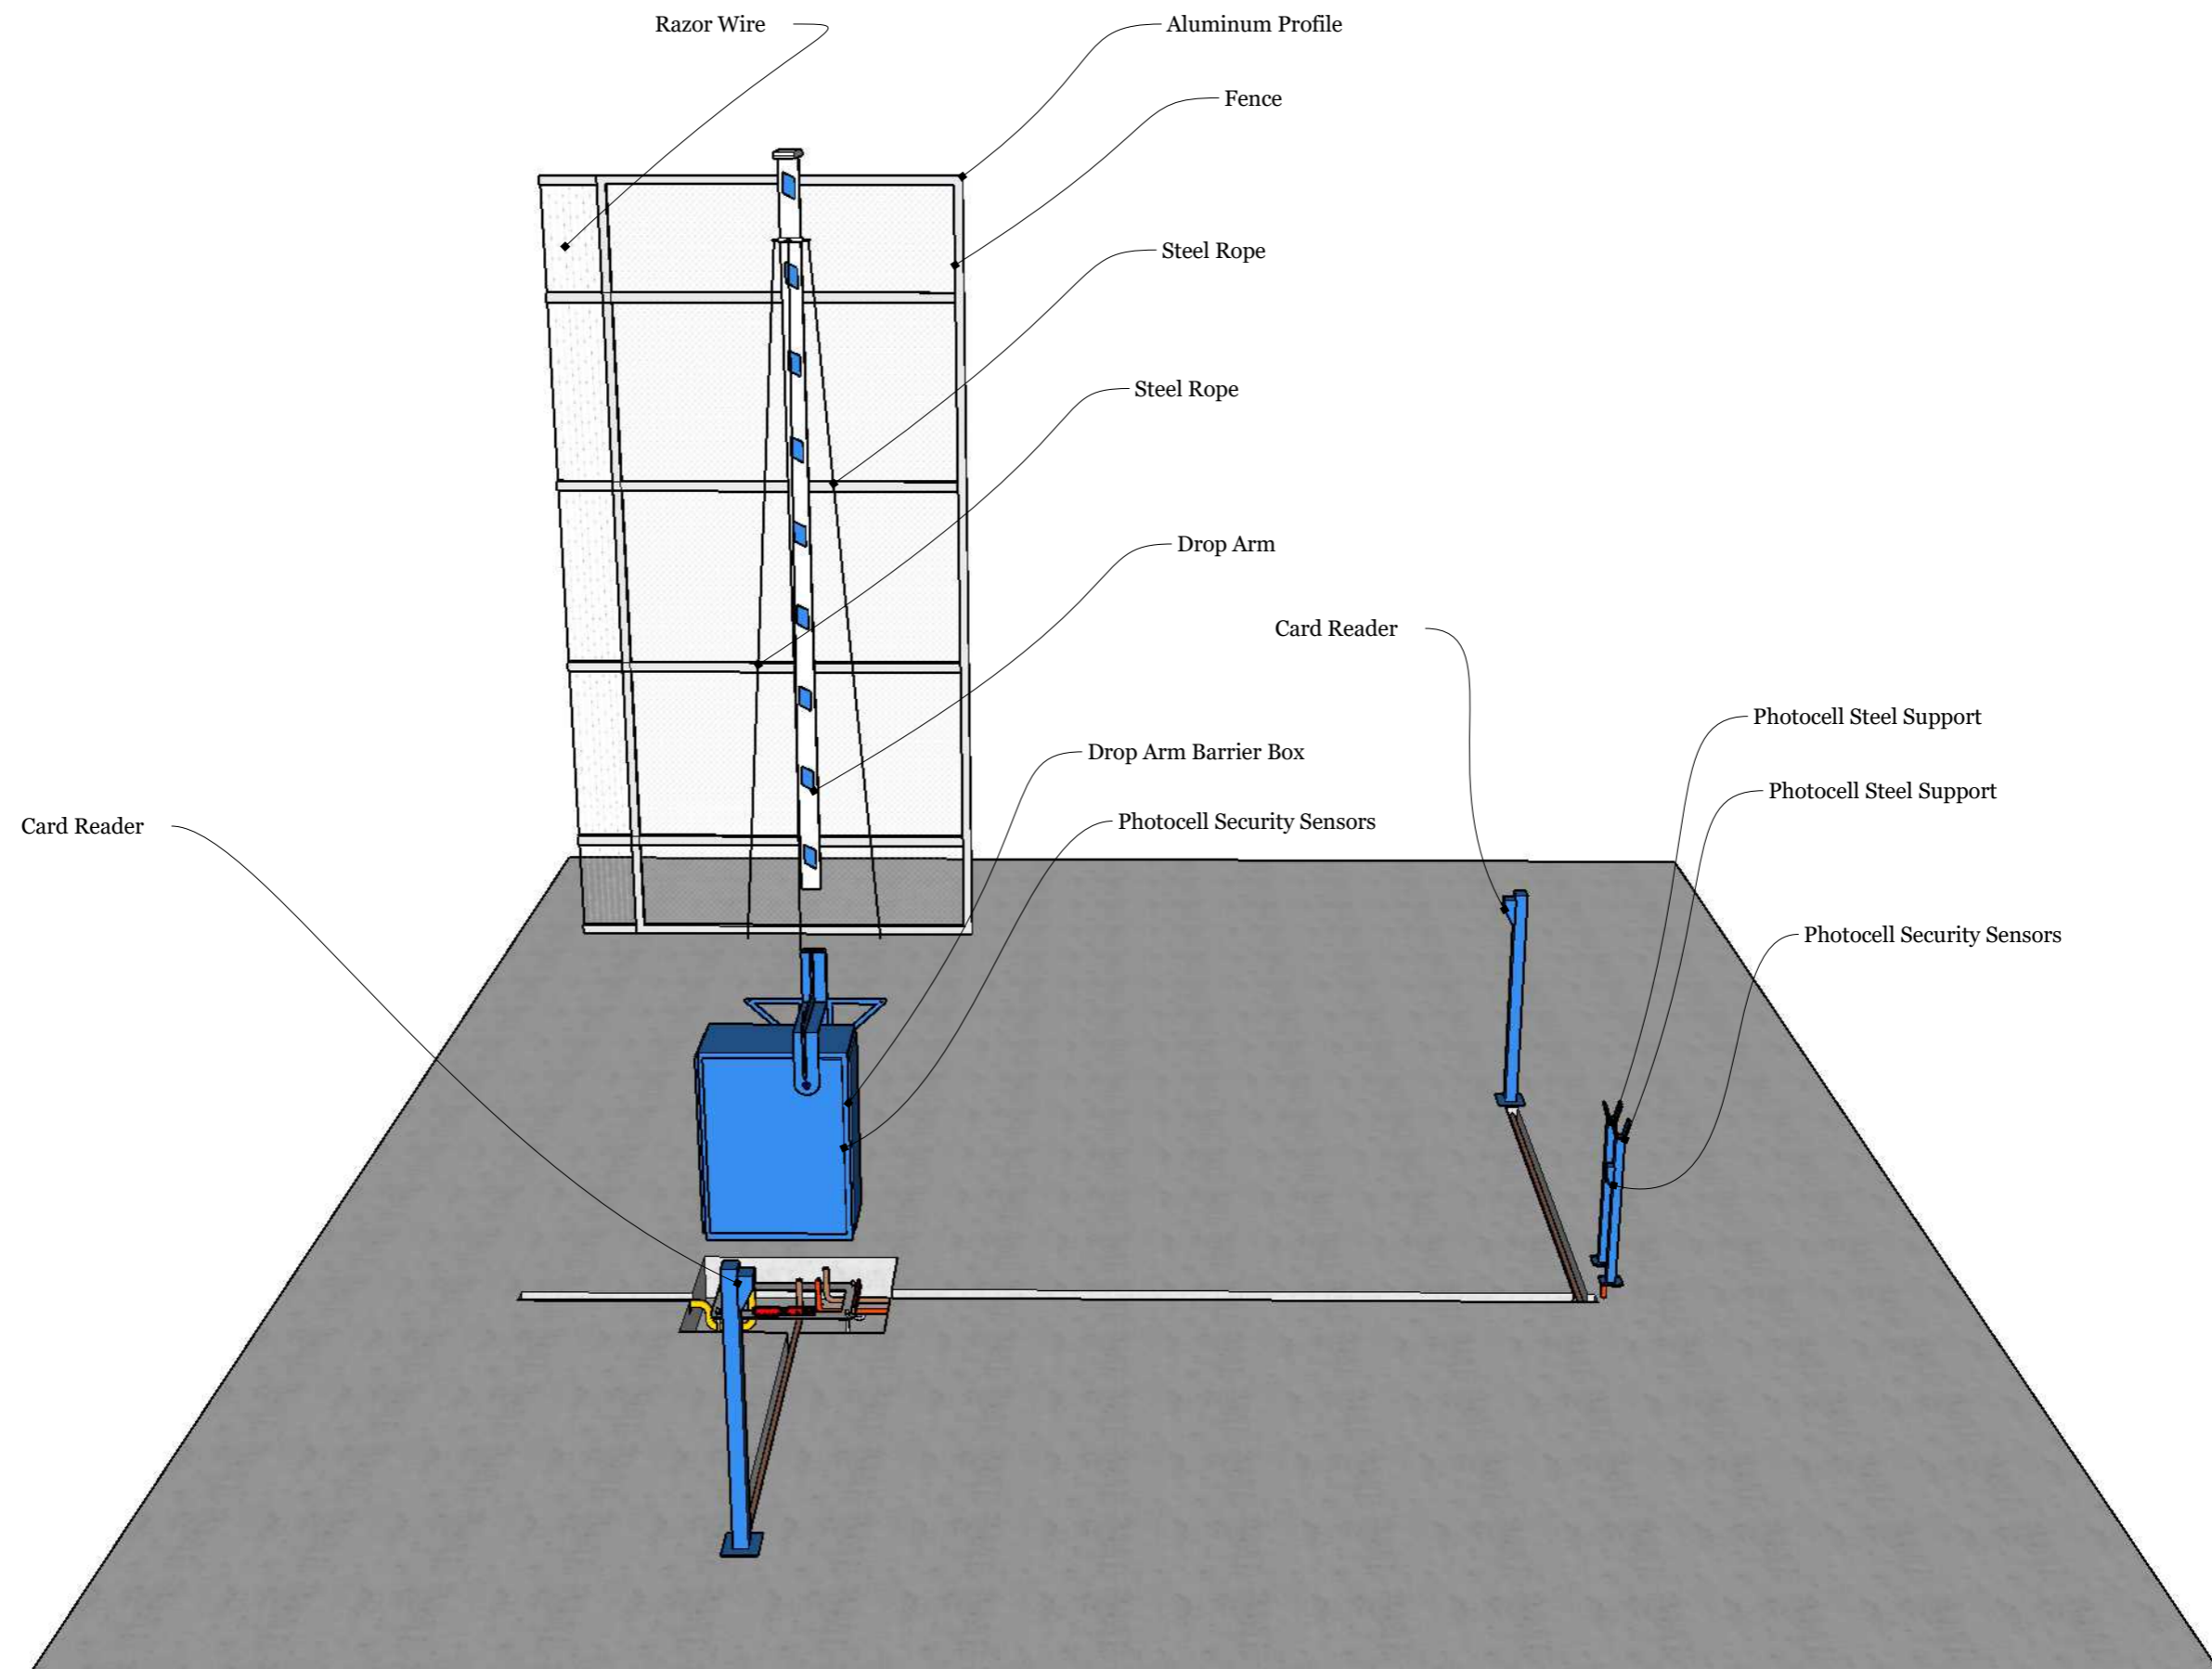


Fence Drop Arm Barrier


REVISIONS	
MM/DD/YY	REMARKS
1	... / ... / ...
2	... / ... / ...
3	... / ... / ...
4	... / ... / ...
5	... / ... / ...

A 01

A

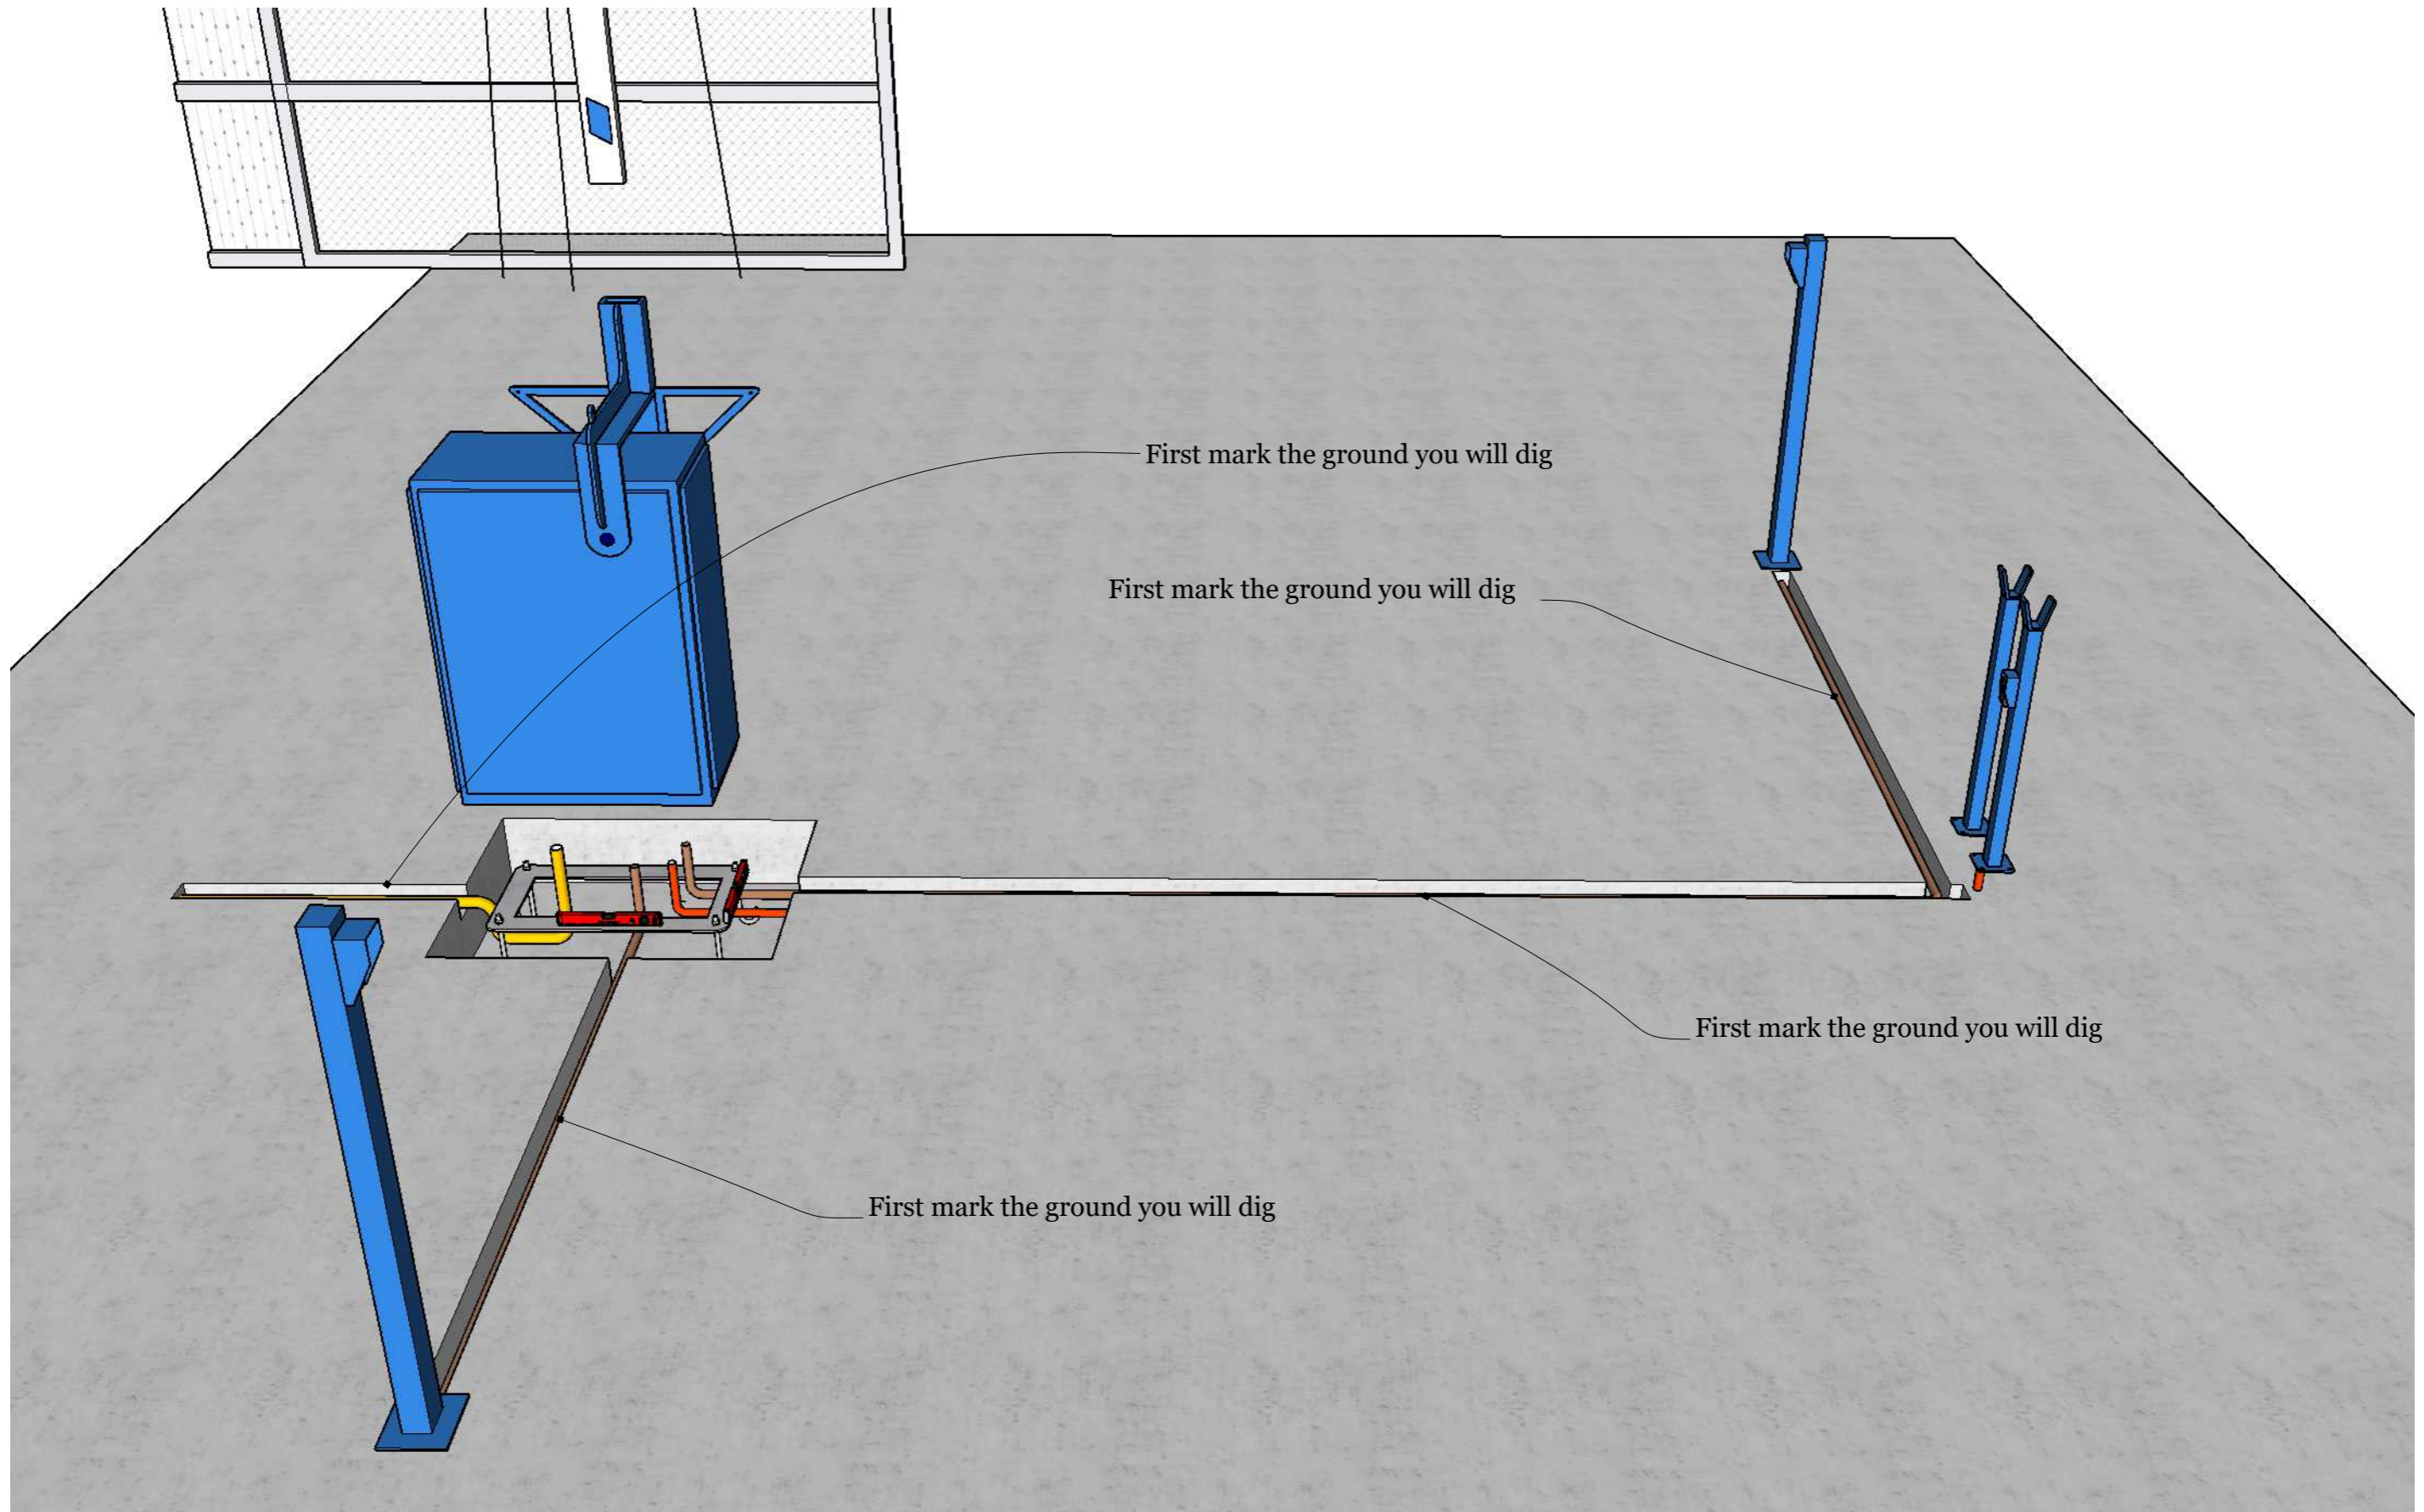

REVISIONS	
MM/DD/YY	REMARKS
1	... / ... / ...
2	... / ... / ...
3	... / ... / ...
4	... / ... / ...
5	... / ... / ...

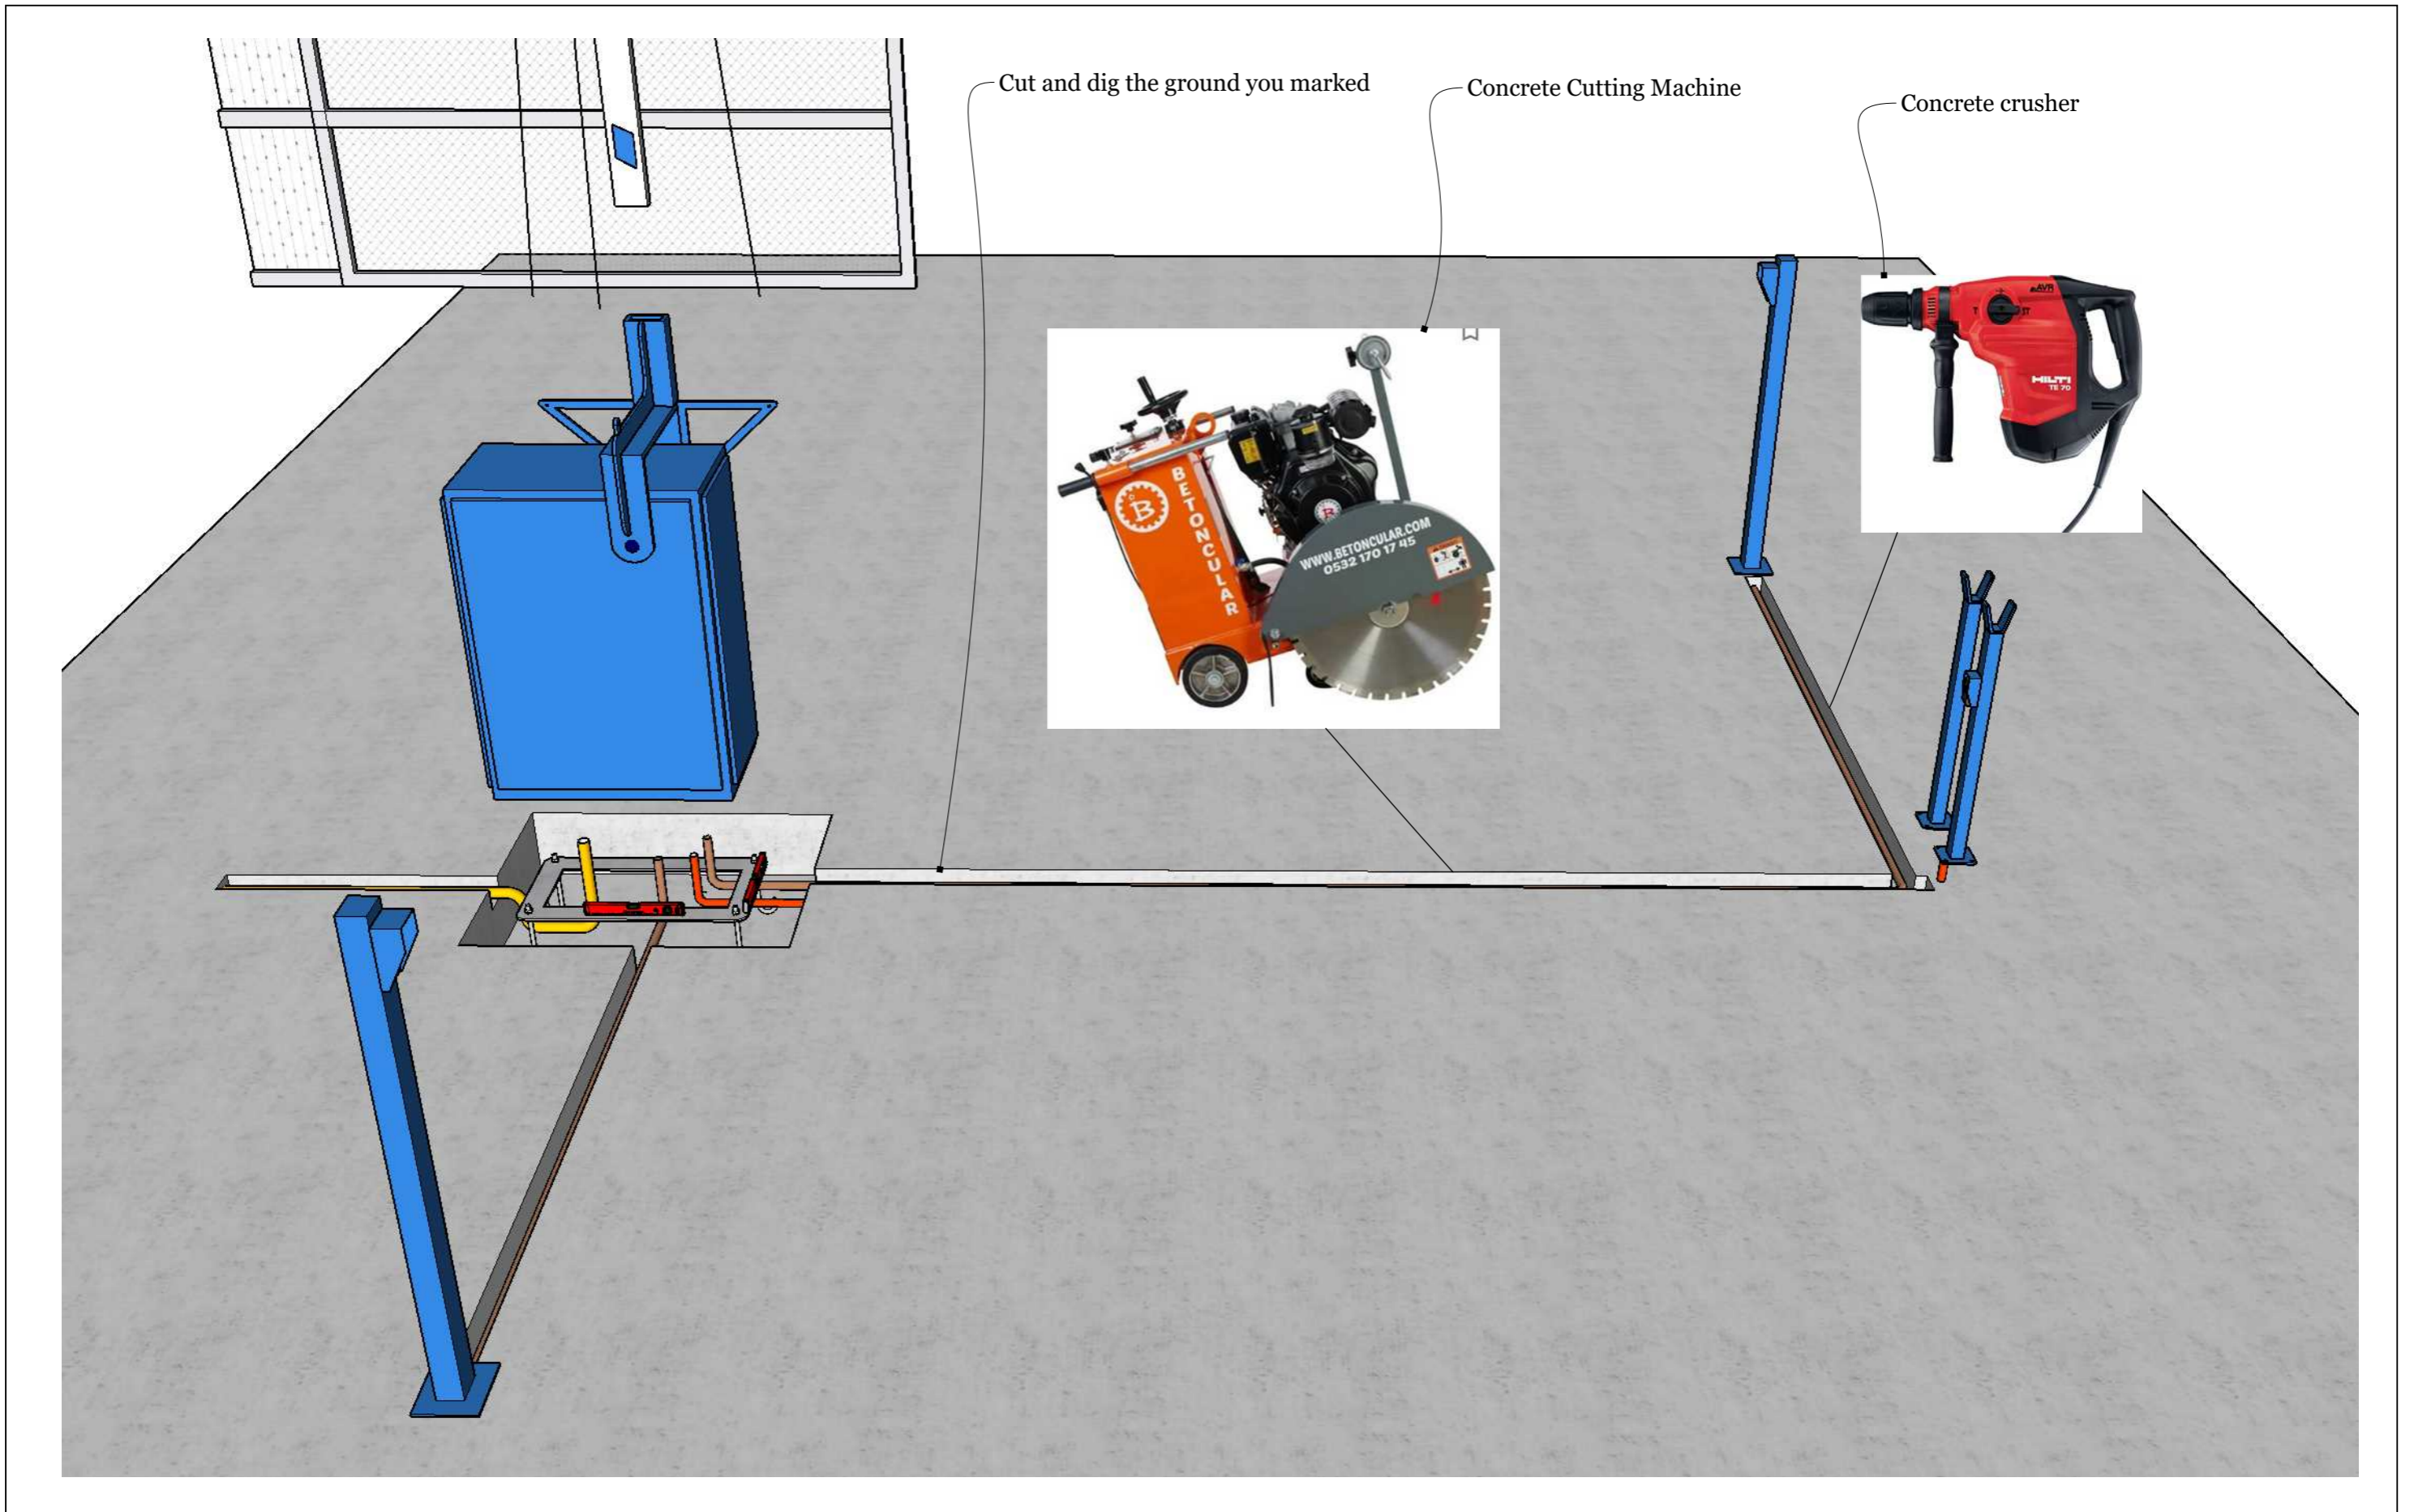


Bouygues Construction Company



Fence Drop Arm Barrier

REVISIONS		
	MM/DD/YY	REMARKS
1	---/---/---	...
2	---/---/---	...
3	---/---/---	...
4	---/---/---	...
5	---/---/---	...

A 03

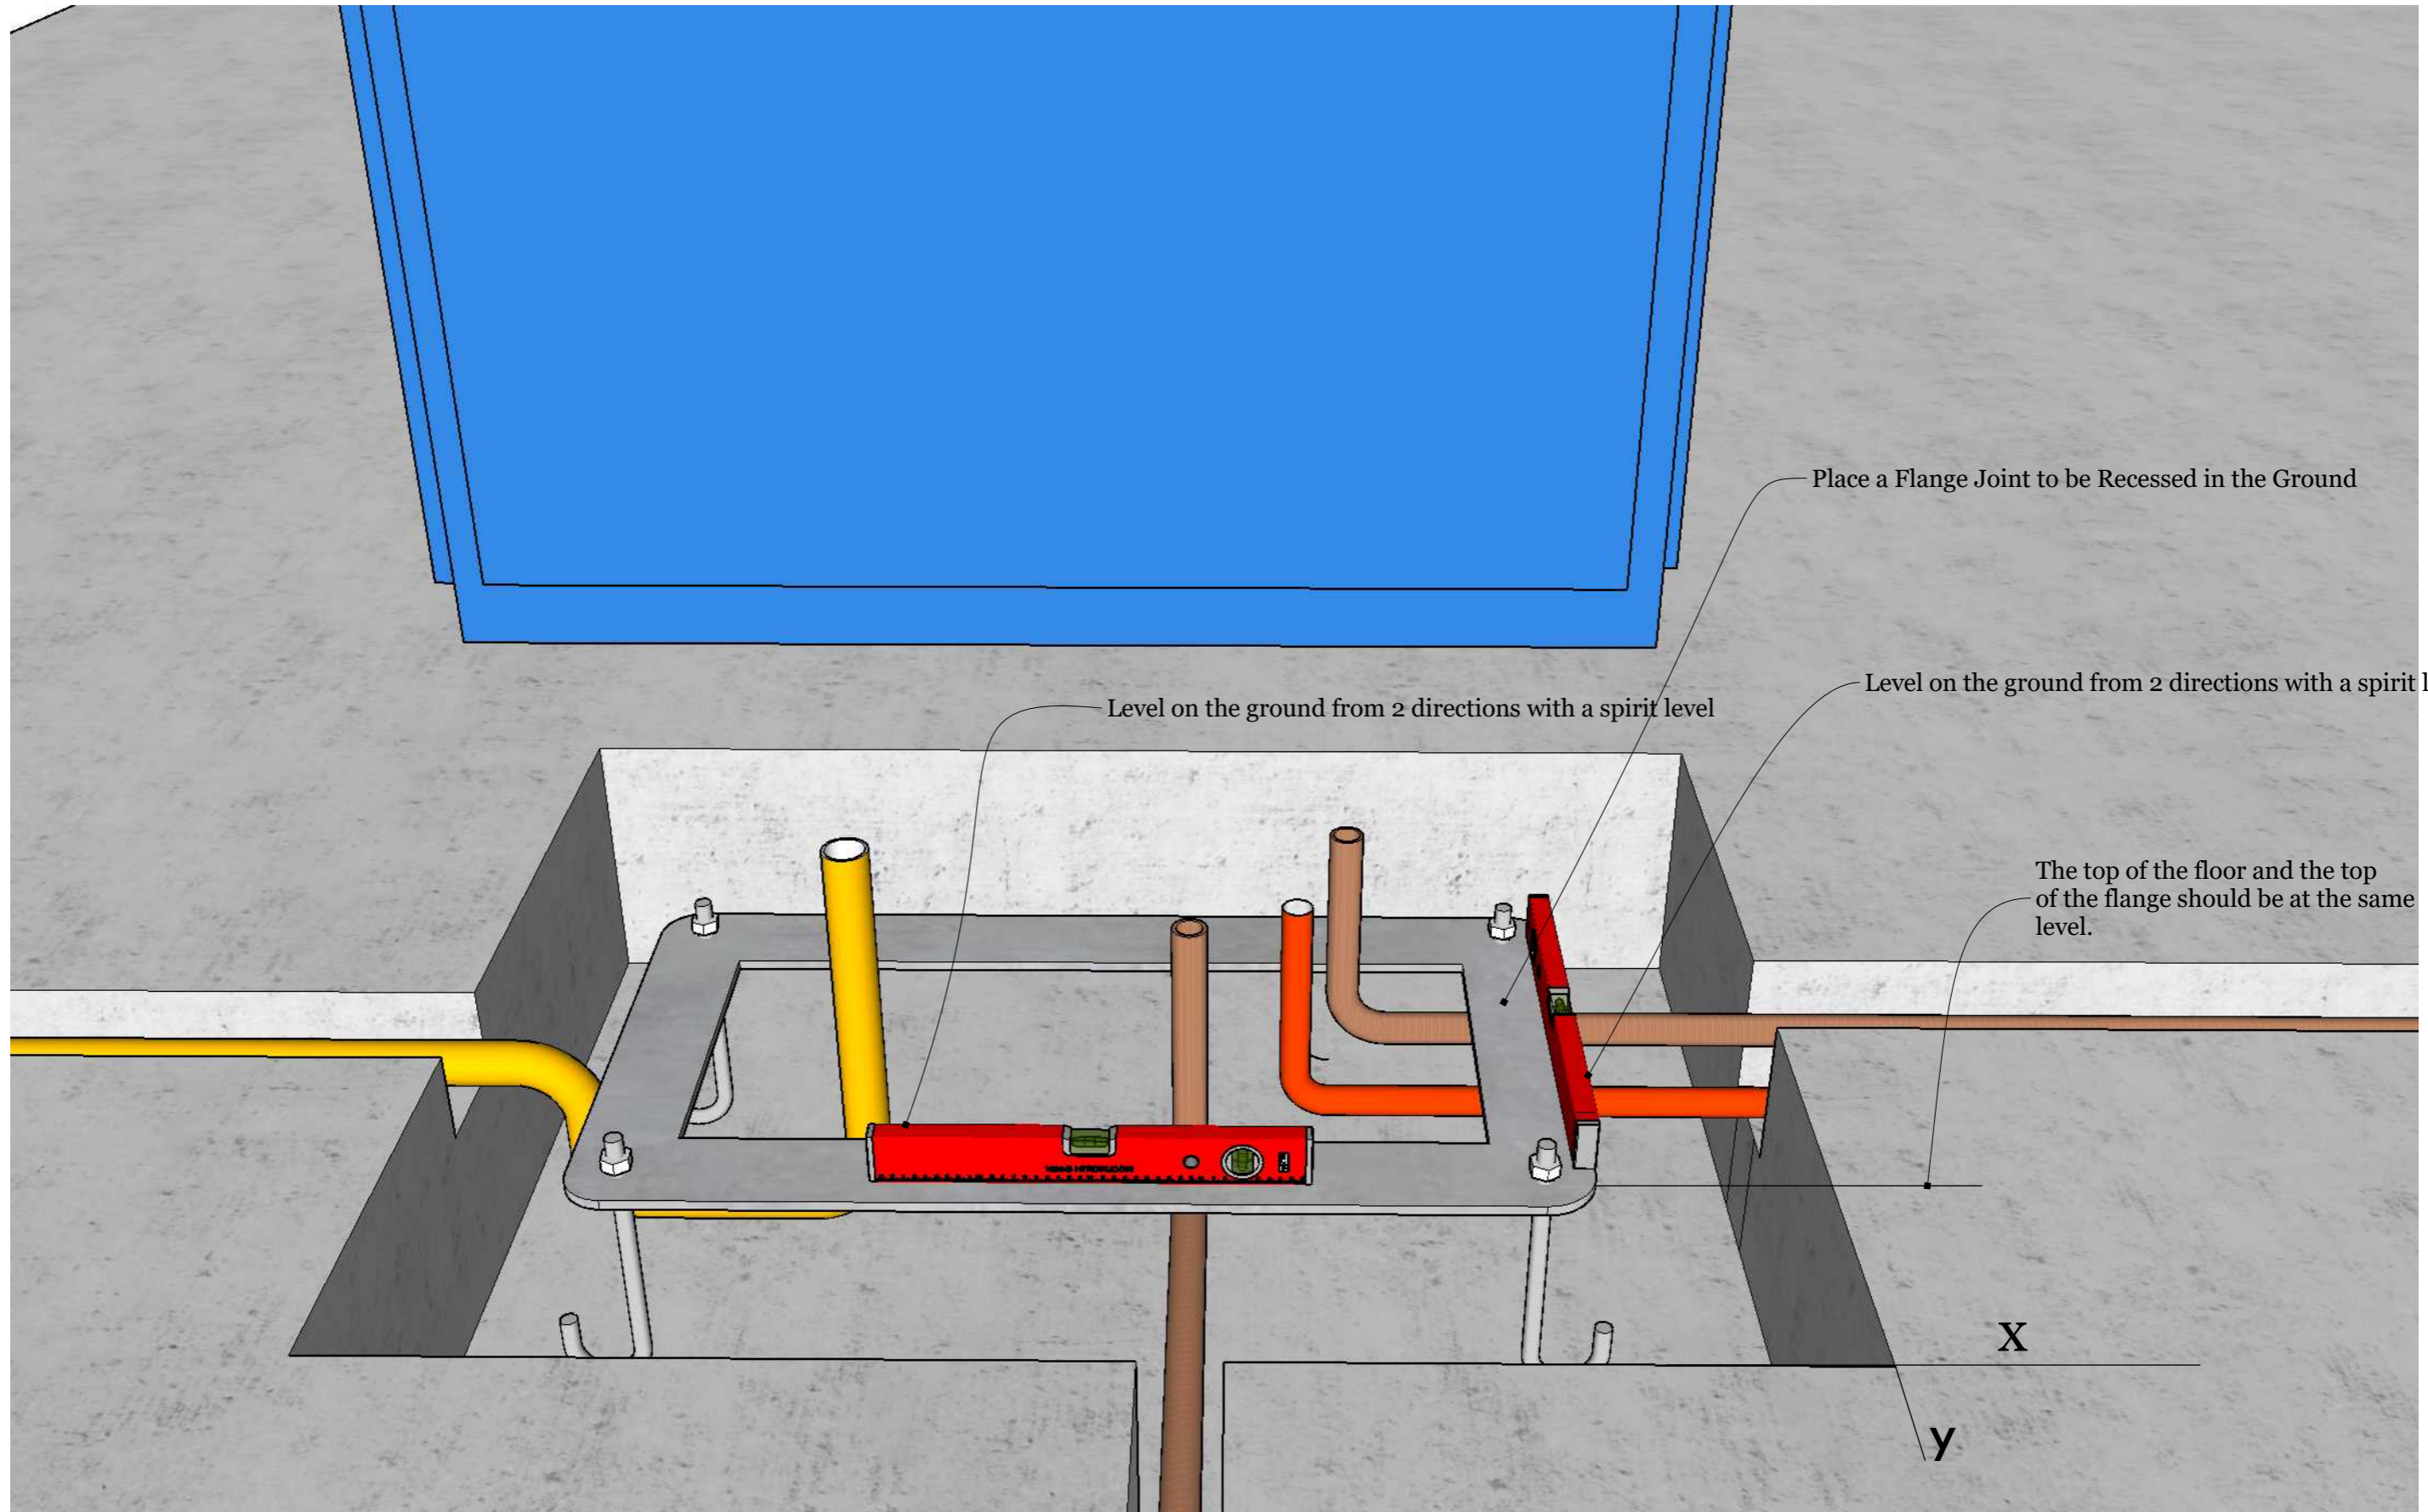

Bouygues Construction Company




Fence Drop Arm Barrier


REVISIONS	
MM/DD/YY	REMARKS
1
2
3
4
5

A 04

Bury the cables and cable casing pipes into the ground.

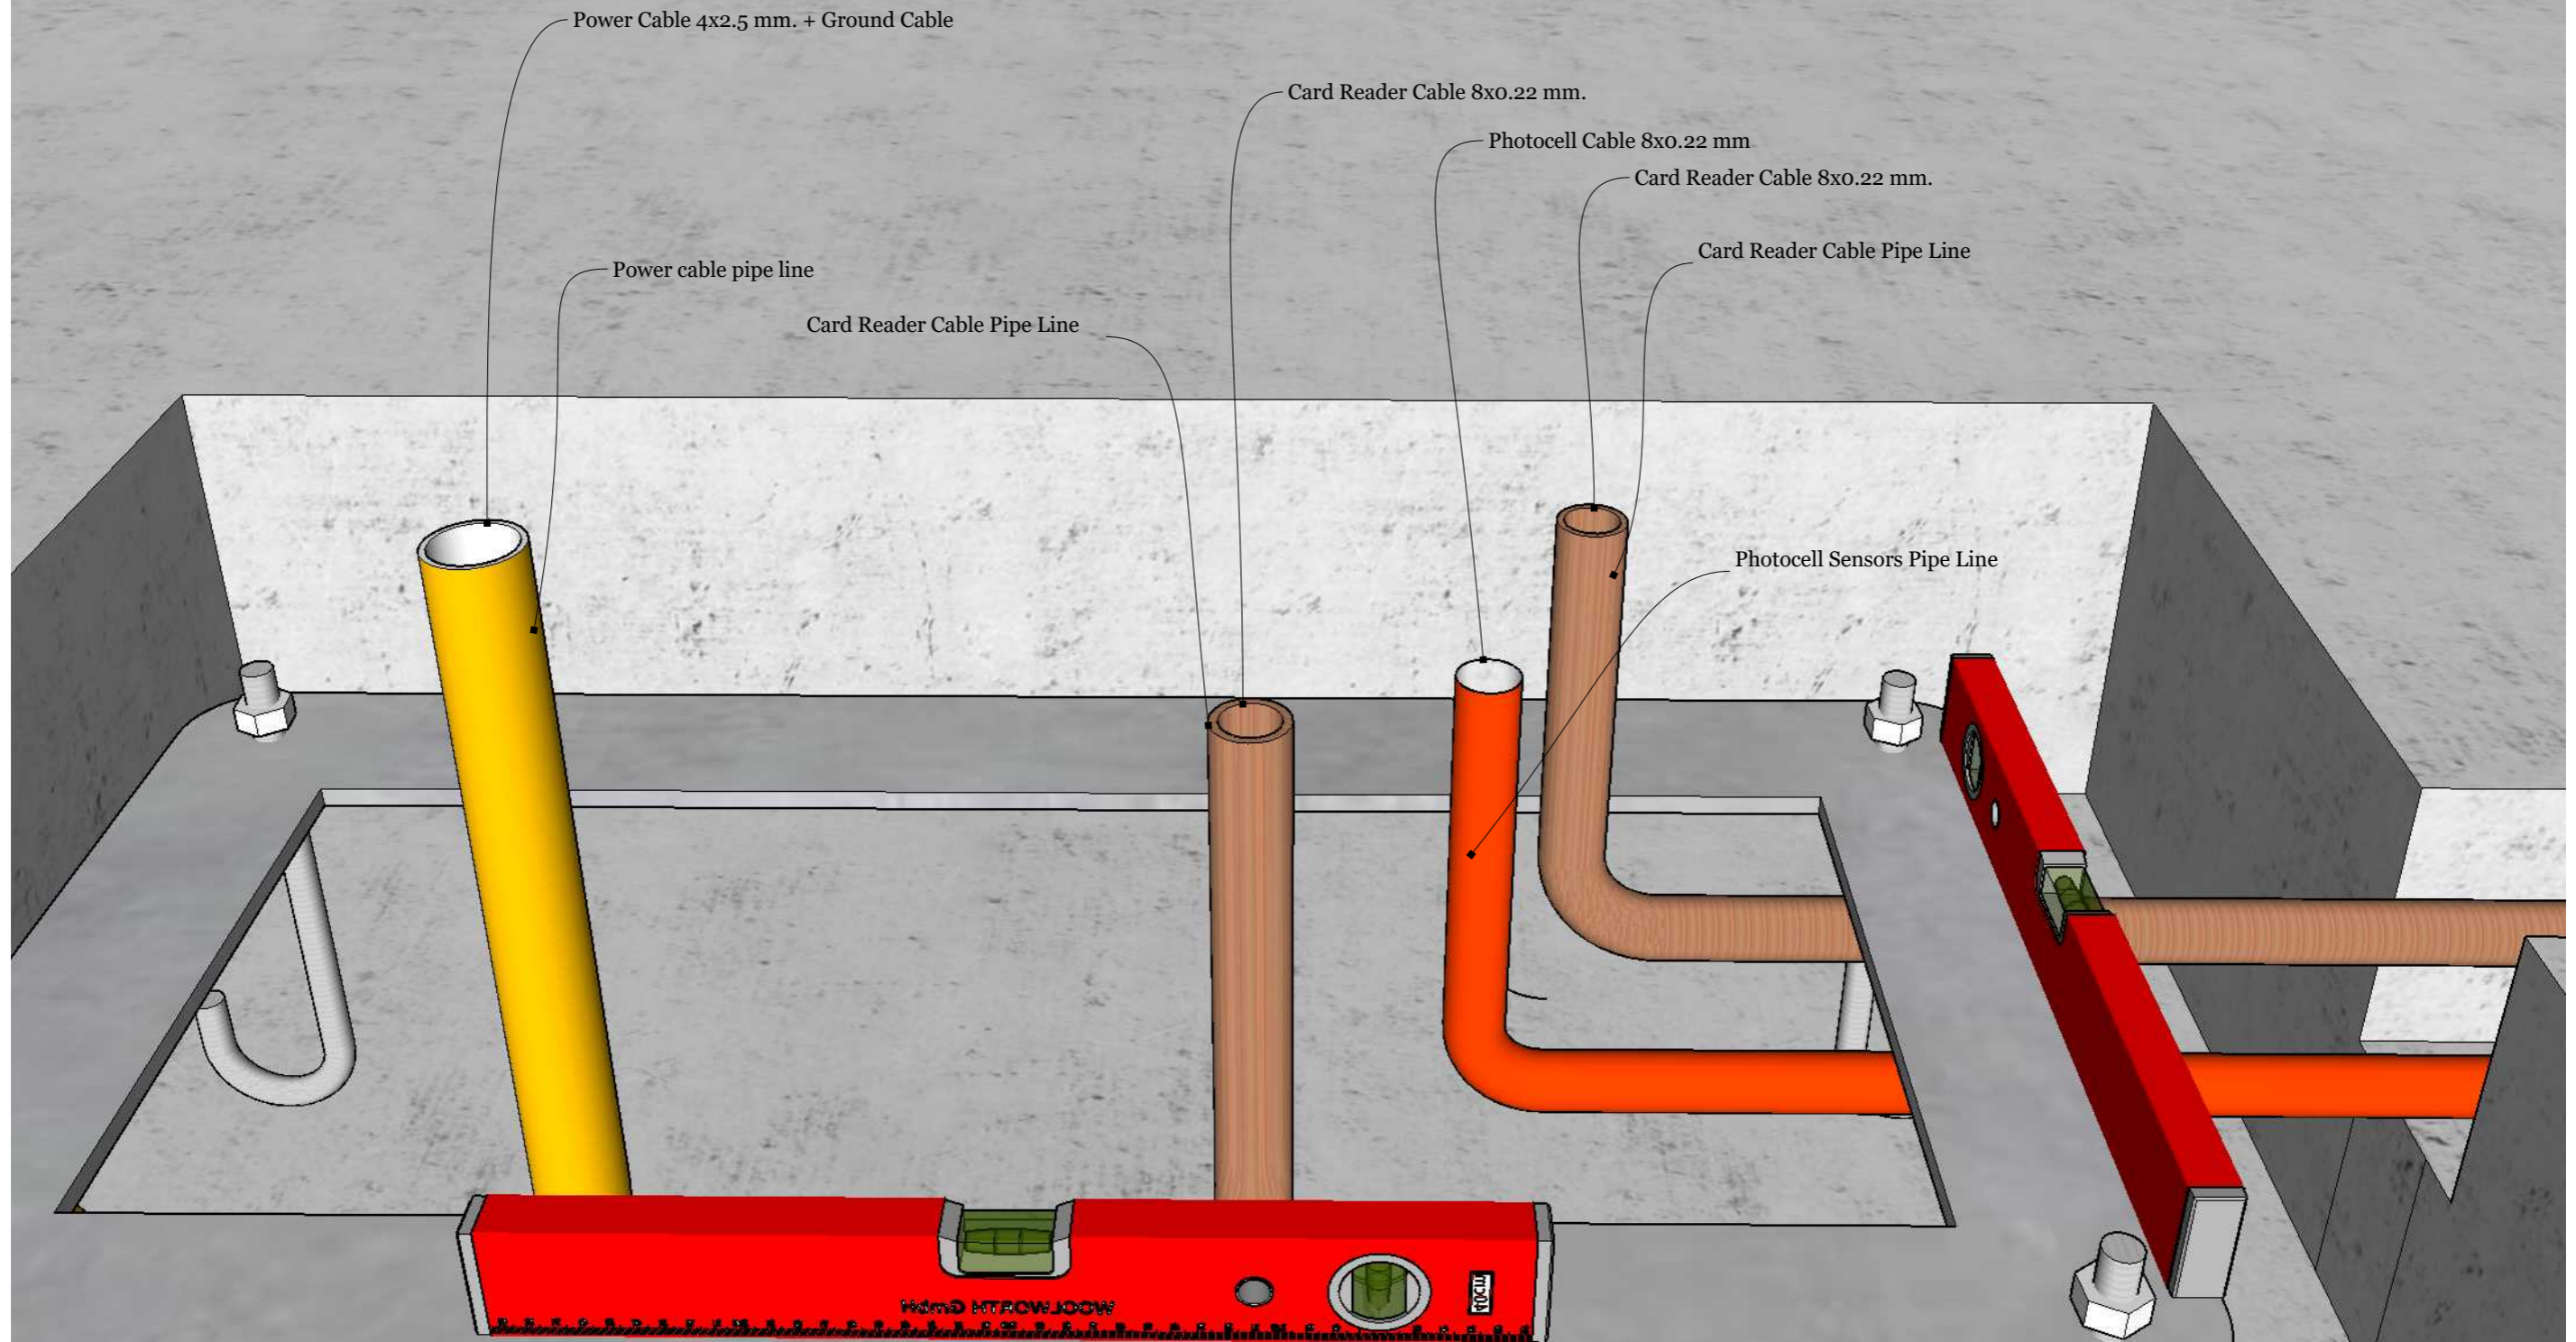

REVISIONS	
MM/DD/YY	REMARKS
1	... / ... / ...
2	... / ... / ...
3	... / ... / ...
4	... / ... / ...
5	... / ... / ...

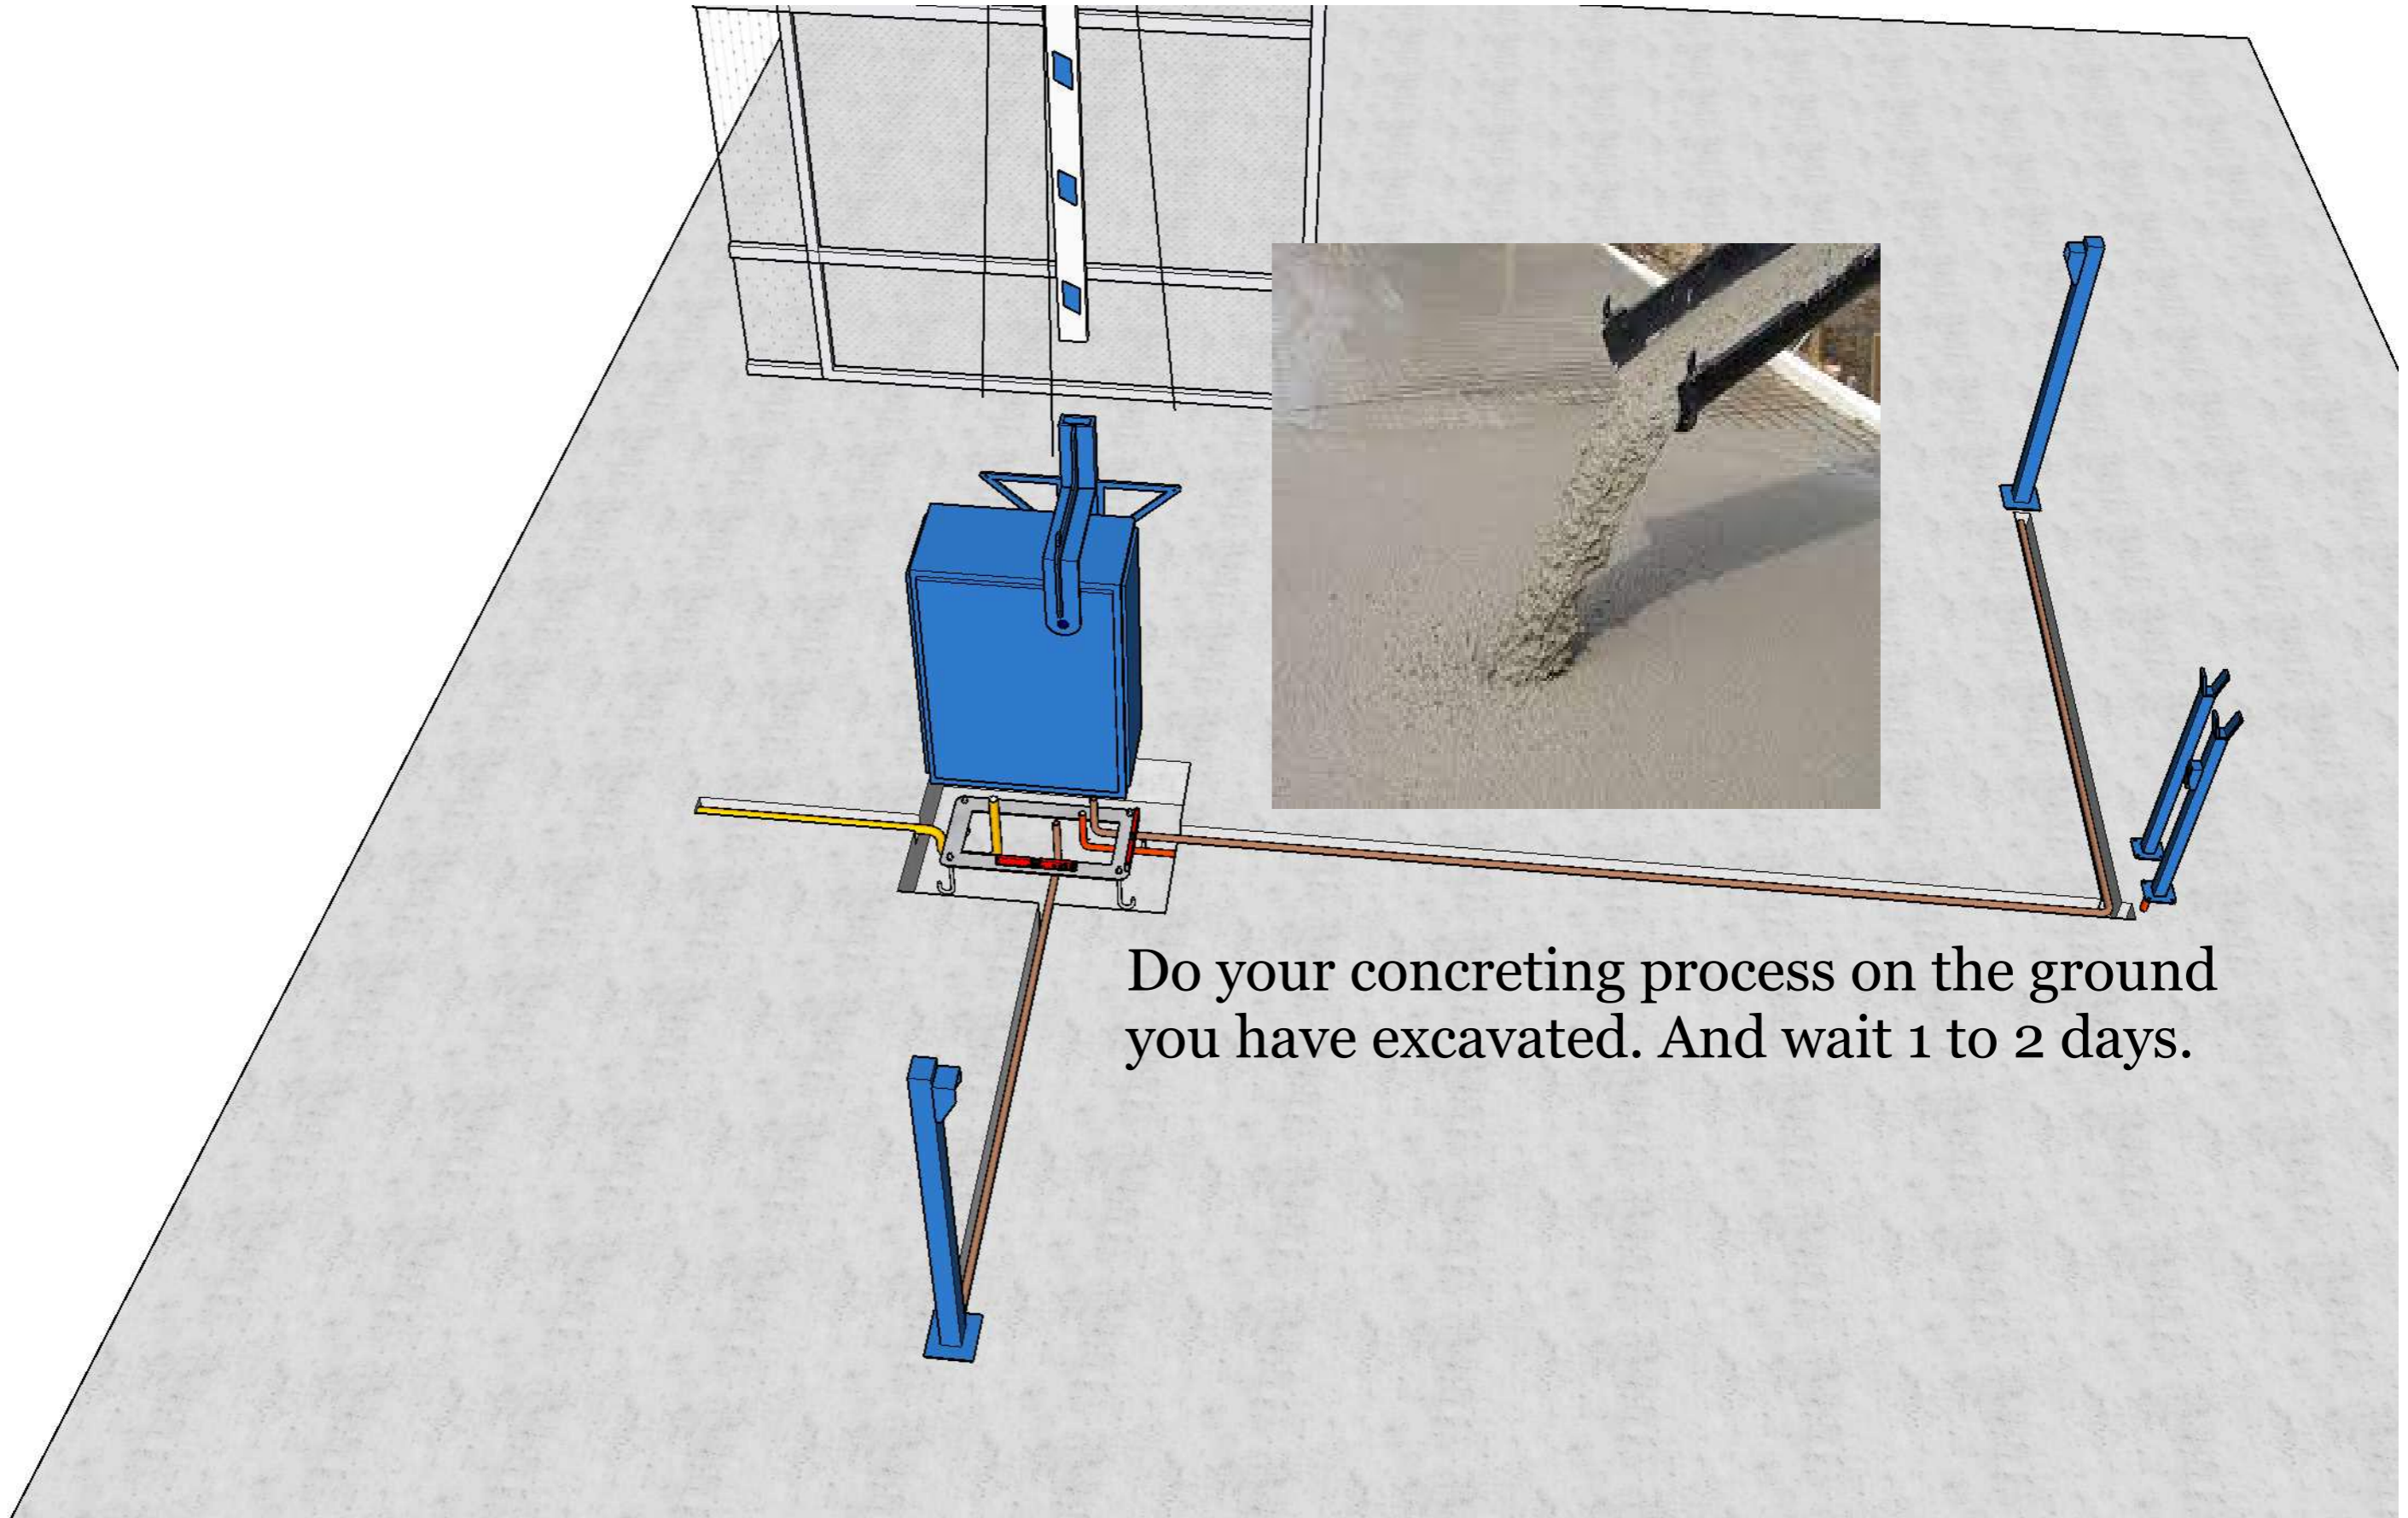

Do your concreting process on the ground you have excavated. And wait 1 to 2 days.

REVISIONS	
MM/DD/YY	REMARKS
1	---/---/---
2	---/---/---
3	---/---/---
4	---/---/---
5	---/---/---